



MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.


Accessing the MID



When you start the engine, the MID shows the last active display from the previous drive cycle.

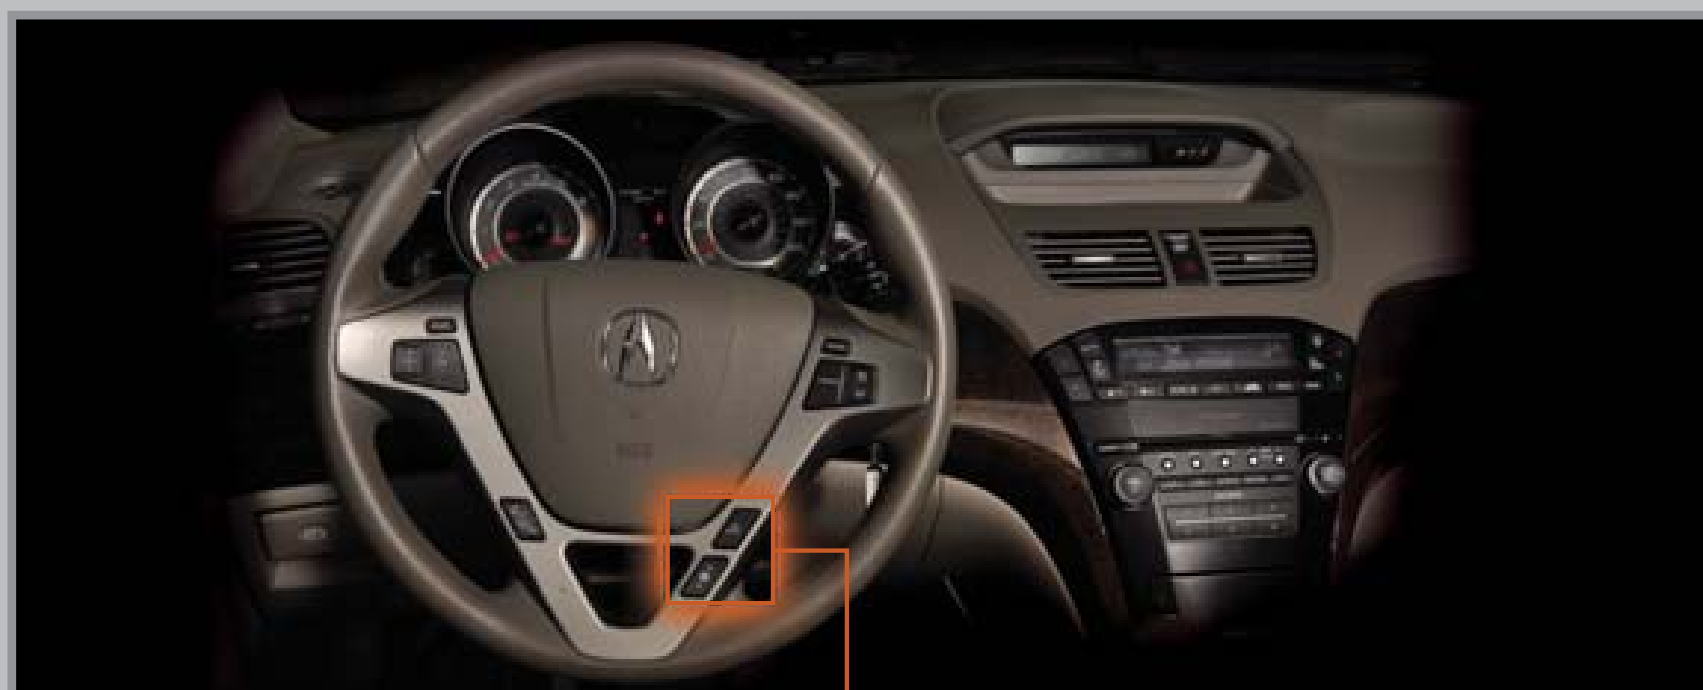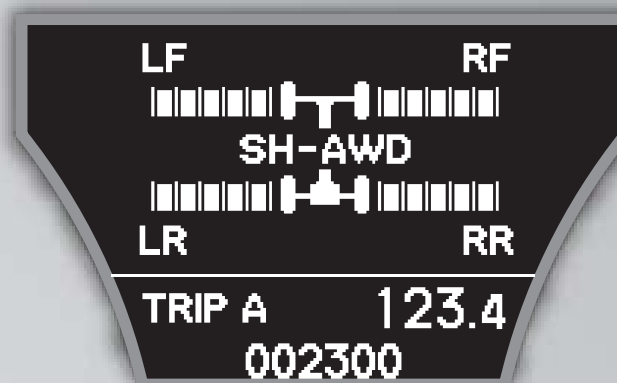


To toggle between the different displays, **press** either Info button (▲/▼) for the main displays and **press** SEL/RESET for the lower displays.

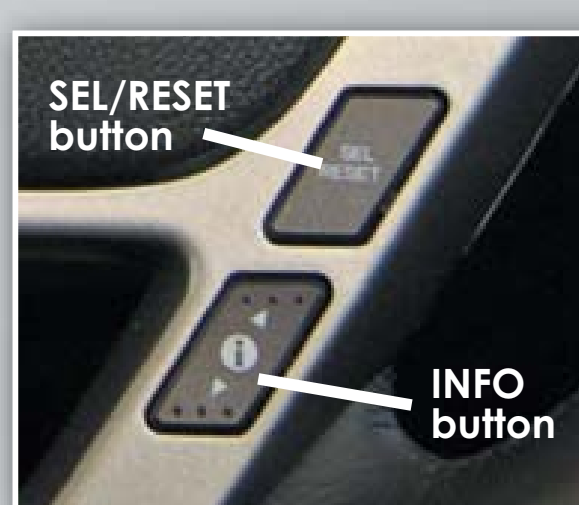


Main Displays

Odometer, Trip meter

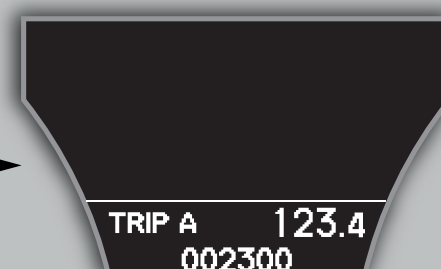

Trip computer

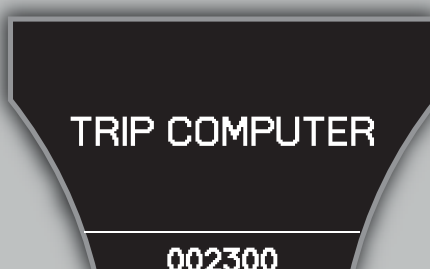


SH-AWD torque distribution monitor



Bluetooth® HandsFreeLink®



Keyless Memory Settings™

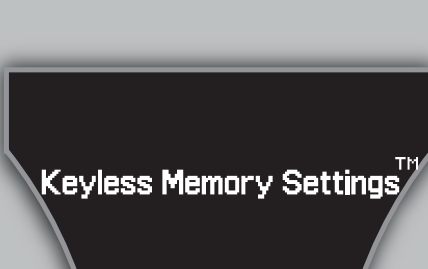


Tire pressure monitor




Lower Displays


Trip A, Odometer

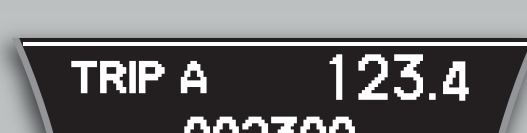


Trip B, Odometer

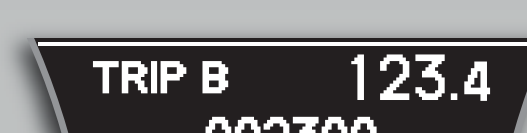


Oil life, Odometer

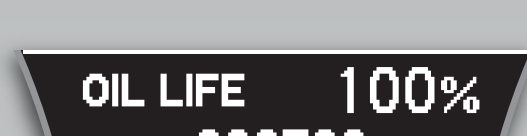


Outside temperature, Odometer

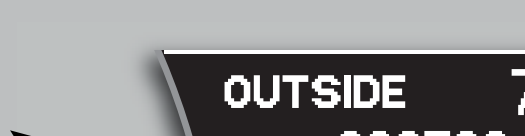


Trip Computer

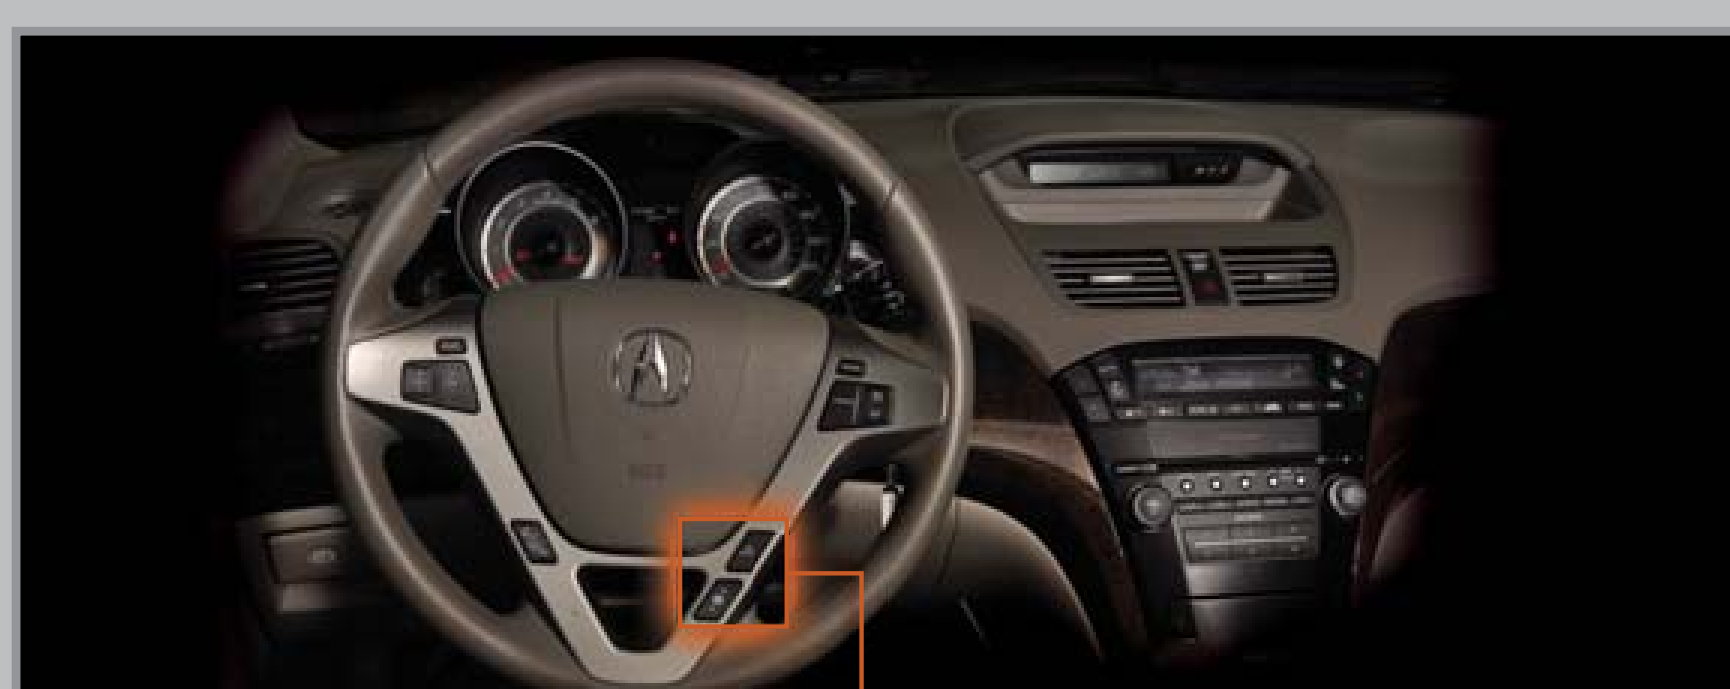


While on the Trip Computer display, **press** SEL/RESET to access trip information and to toggle through the various screens. **Press** either INFO (▲/▼) button to return to the Trip Computer main display.

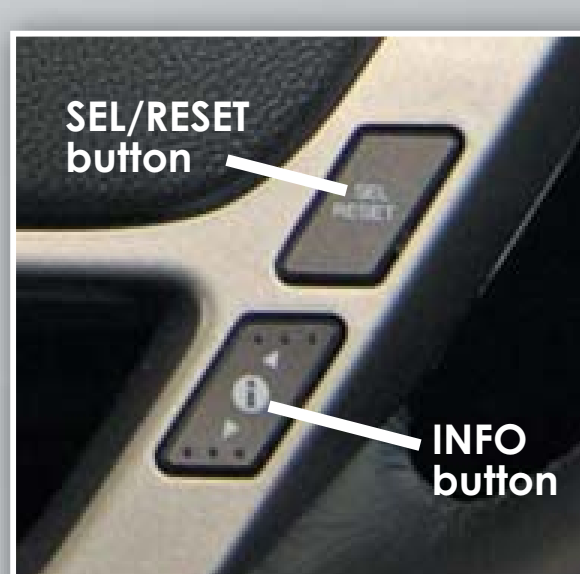

Trip computer

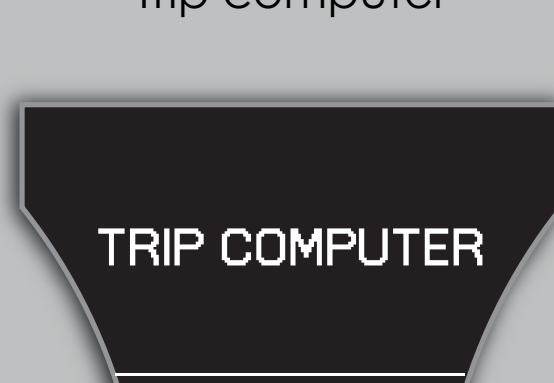

Average fuel economy A, Range

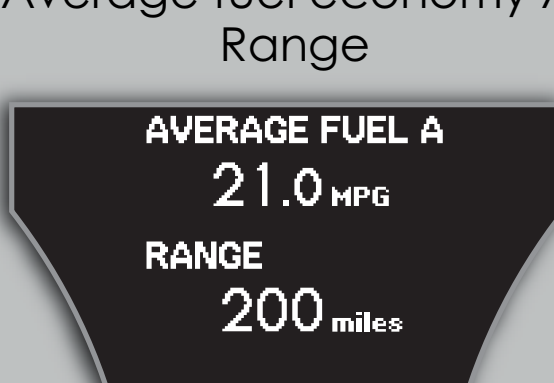

Average speed, Elapsed time



Average fuel economy B, Range

